



Containment Single Sliding Door



User Installation Guide



Introduction

Thank you for choosing a Tate product. Tate containment products are engineered to maximize the efficiency of your data center air handling system by isolating cold supply and hot exhaust airflow. We would be interested in hearing any comments you may have on this installation manual, product, or overall experience. Please call or e-mail our Technical Service Department:

Phone: 410-799-4200

E-mail: info.amer@tateglobal.com

Safety

1. Two or more people are required for the handling and installation of this system.
2. Wear personal protective equipment (PPE) should be worn when drilling, cutting, or installing. PPE includes gloves, safety eyeglasses, hardhats, etc.
3. Do not leave the site unattended until the installation is complete.
4. Do not drill into the raised floor or server rack without first ensuring that no electrical wires or cabling are in the area of drilling.

Included Components


1. Containment Hinge Door
2. Floor and Rack mounting hardware

Required Tools


1. Level
2. Allen Wrench (6mm)
3. Drill-bit with Power Driver

Floor and rack mounting hardware

1a. Use long L-bracket hardware if the door is taller or shorter than the rack.

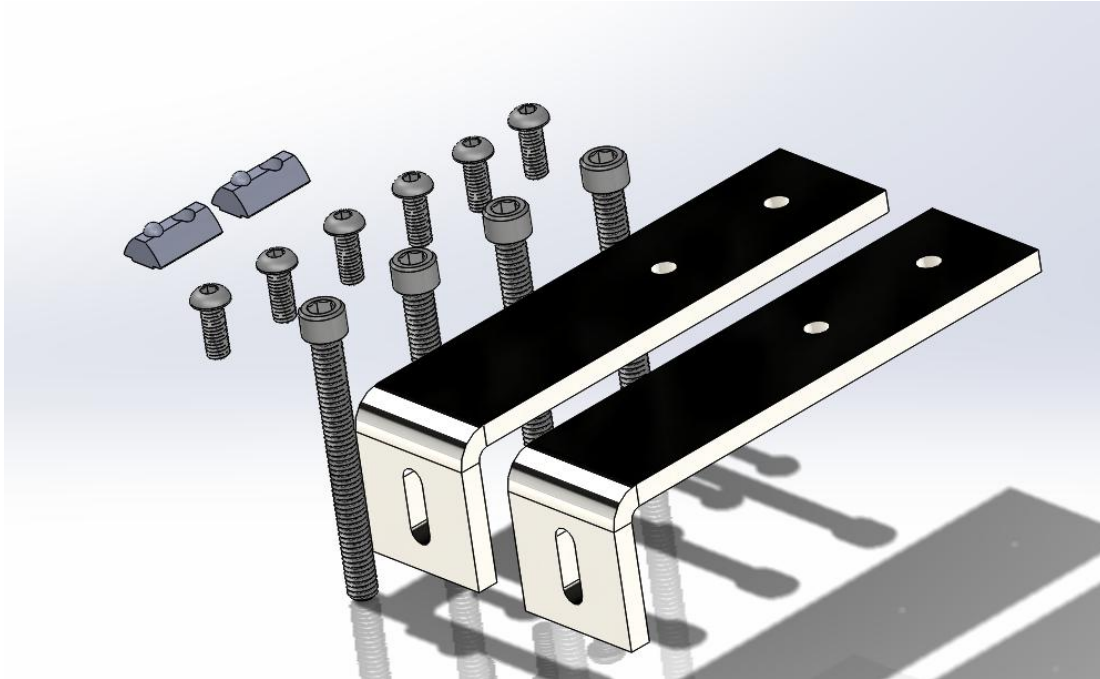


1b. Use straight bracket hardware if the door is the same height as the rack.

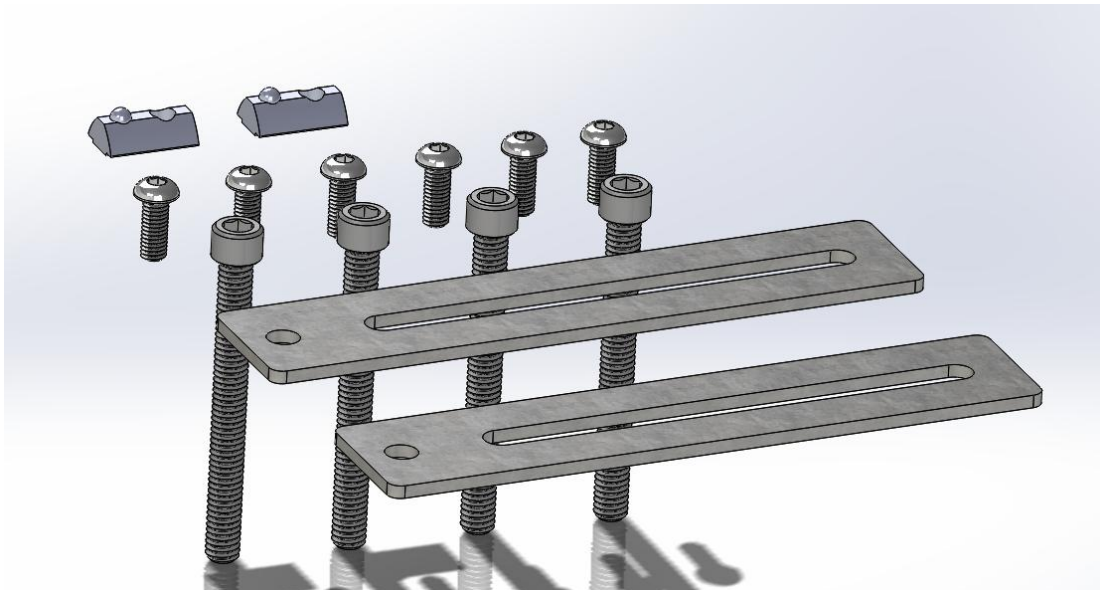




2. Unpack and aligned the door next to the rack.

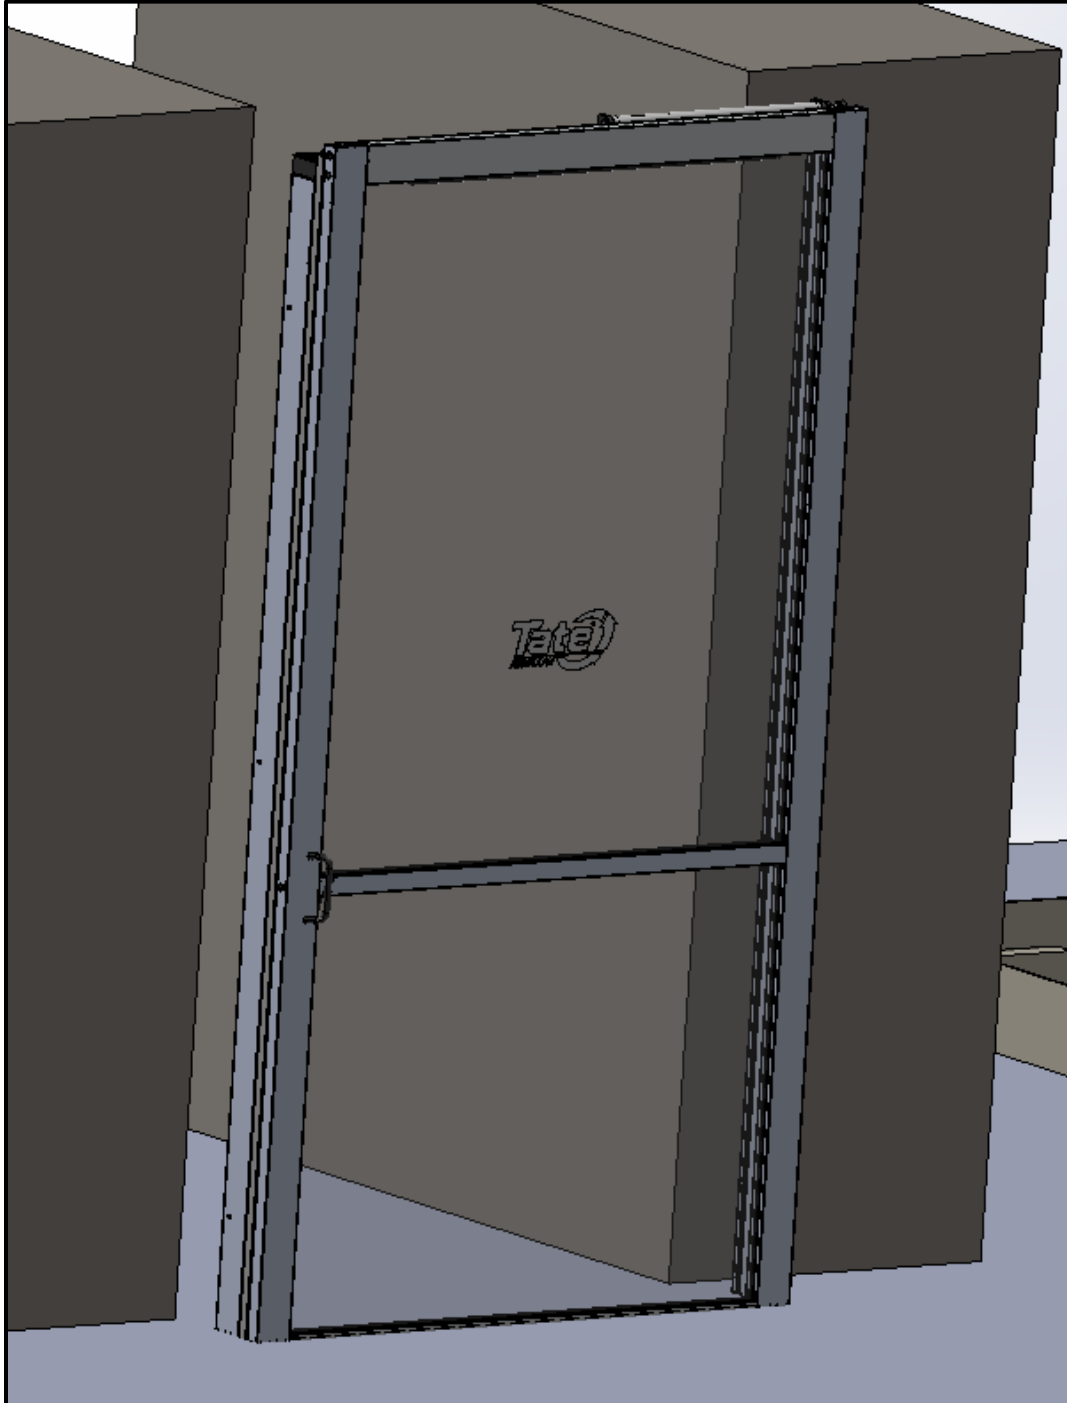


If the door is taller than the rack, follow these installation directions.

2a. Insert T-Nuts into slot on the back of the vertical door frame extrusion on both sides of the door. Then bolt the L-bracket to the T-nuts in position so the L brackets lay flat and even on the top of each rack.

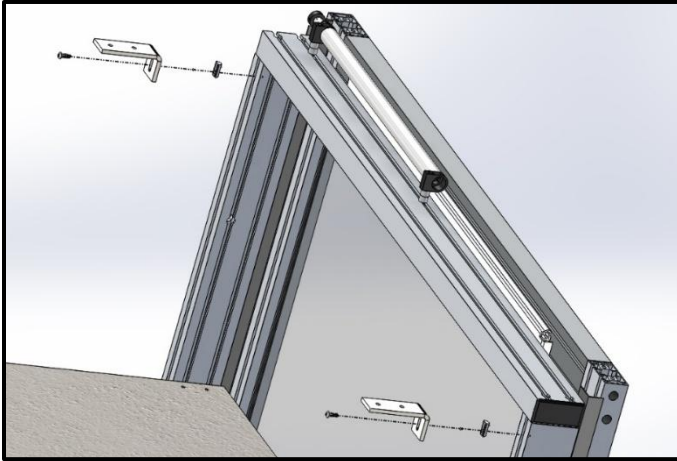


2b. Once the L-brackets are bolted to door frame, stand the door vertically against the racks where the door it is to be installed. Adjust the door position to the desired location and bolt the door to the racks through the L-brackets.

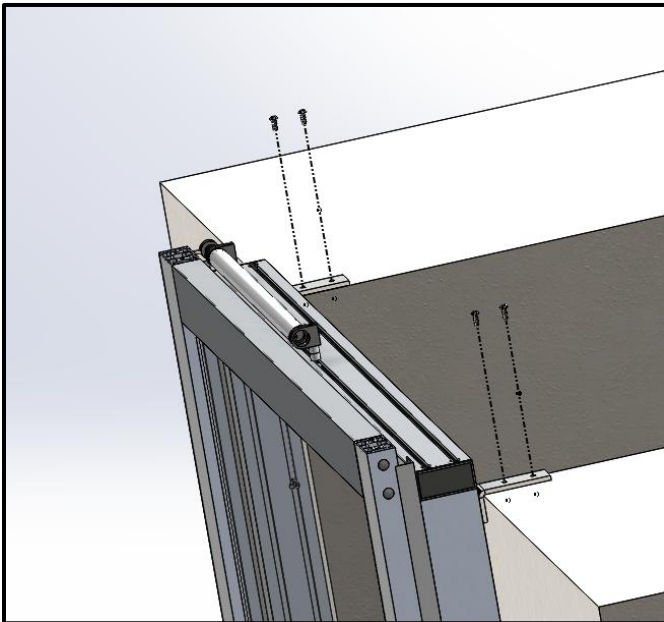


If the door is the same height as the rack then follow these installation directions.

3a. Insert T-nuts into the top horizontal slot near the ends of the header bar extrusion on both sides of the door. Then bolt the straight bracket to the T-slot nuts in position so the bracket lays flat and even on the top of the rack.

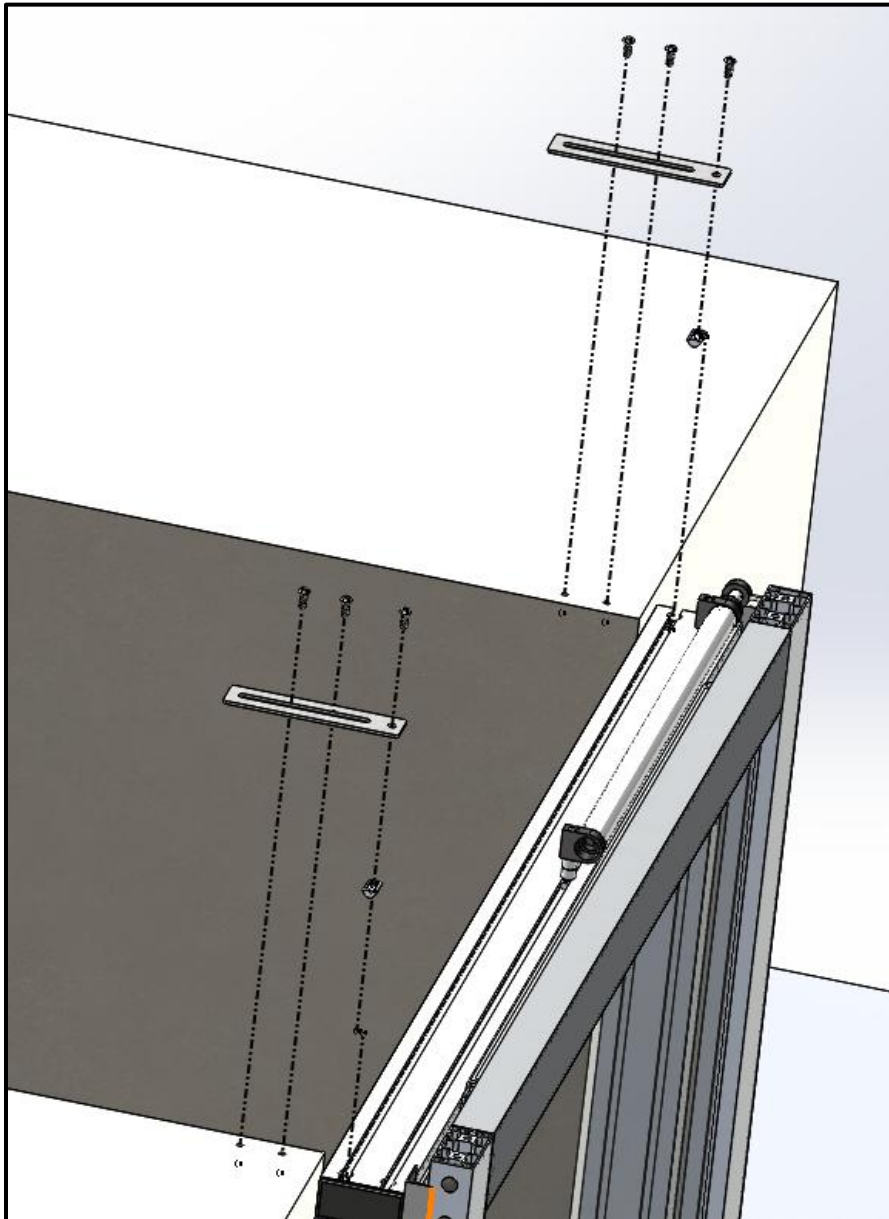

3b. Once the straight brackets are bolted to door frame stand door vertically against the racks where it is to be installed. Align door in desired position and bolt door to the racks through the straight brackets.

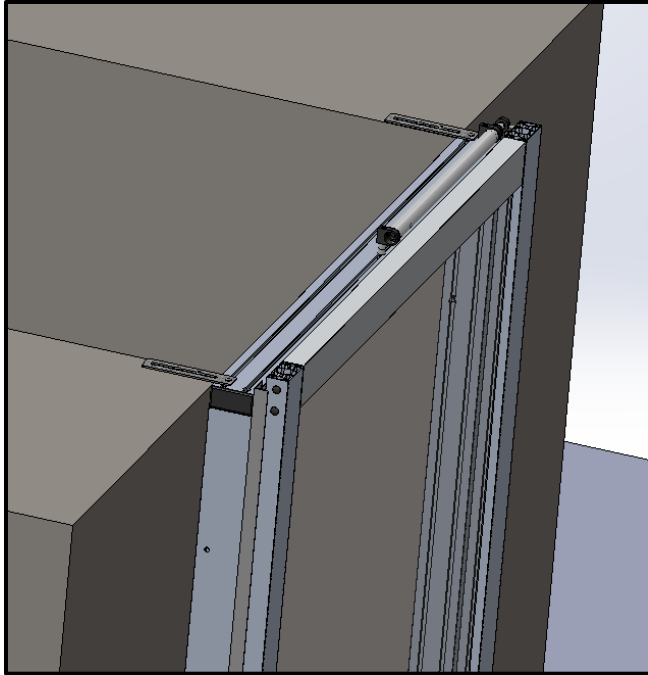


Mount the door to the floor


4a. Use the level to ensure that the frame is in the correct location and is not tilted in any way. Use the level on the sides and on top of the header bar. Floor shims may be required to level the door.



4b. Once the door is level pre-drill the floor for installation of bolts through the pre-installed floor mounted angle brackets. After drilling holes install 2 bolts to secure door to the floor.

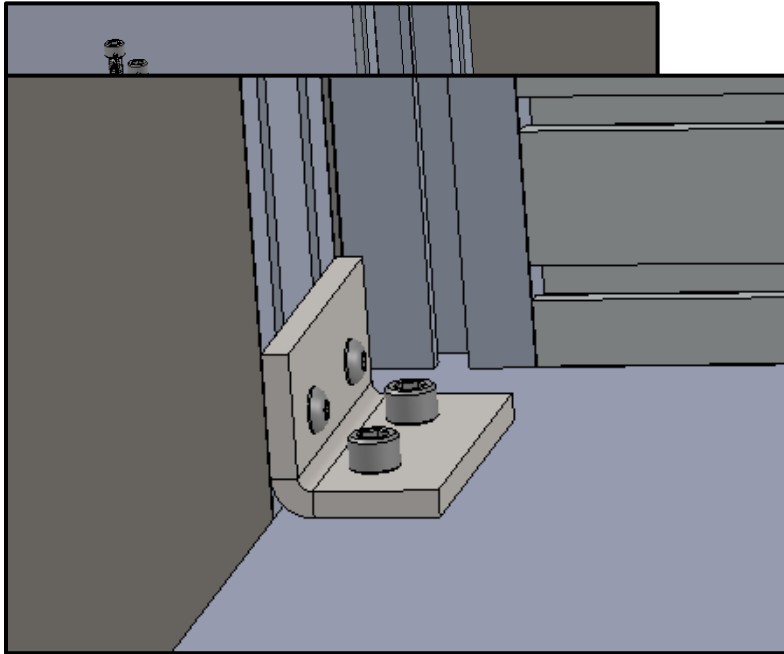

4b. Repeat the process above on other side of the door.

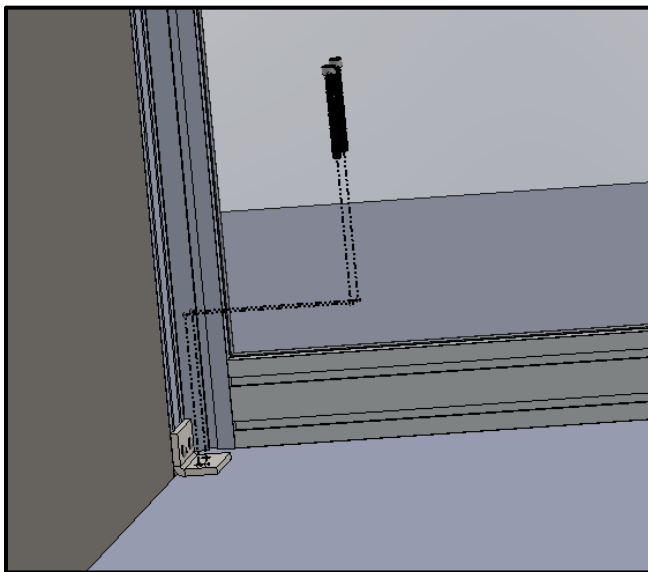

4c. Properly installed floor mounted angle bracket.



Trouble Shooting

- | | |
|--|--|
| 1. Door is not level, Door rubs floor when opening | The doors may not align properly if the floors are not level or if the Header is not fully bolted down. |
| 2. Door does not seal properly | The doors will not seal correctly if the frame assembly is not square. Adjust the frame assembly by loosening the bolts. |



Rev 06/19/2026
© 2026 Tate Access Floors, Inc
7001 Columbia Gateway Drive | Suite 500 | Columbia | MD | 21046

Tate reserves the right to amend product information without prior notice. Care has been taken to ensure that the contents of this publication are accurate, but Tate, its parent company and its subsidiary companies do not accept responsibility for errors or for information that is found to be misleading or outdated. Suggestions for, or description of, technical specifications and the end use or application of products are provided in good faith and must be verified prior to use.

To ensure you are viewing the most recent and accurate product information, please visit this link:
www.tateglobal.com